


CODEGUARD SECURITY LTD

Codeguard Security Ltd Quiet Waters Innovation Centre
 Earith Cambridgeshire UK PE28 3PN
 Tel: 44 (0) 1763 849 762
 Fax: 44 (0) 1763 848 369
 mail@codeguardsecurity.com

Connecting SLC-1 Controller to Keypad

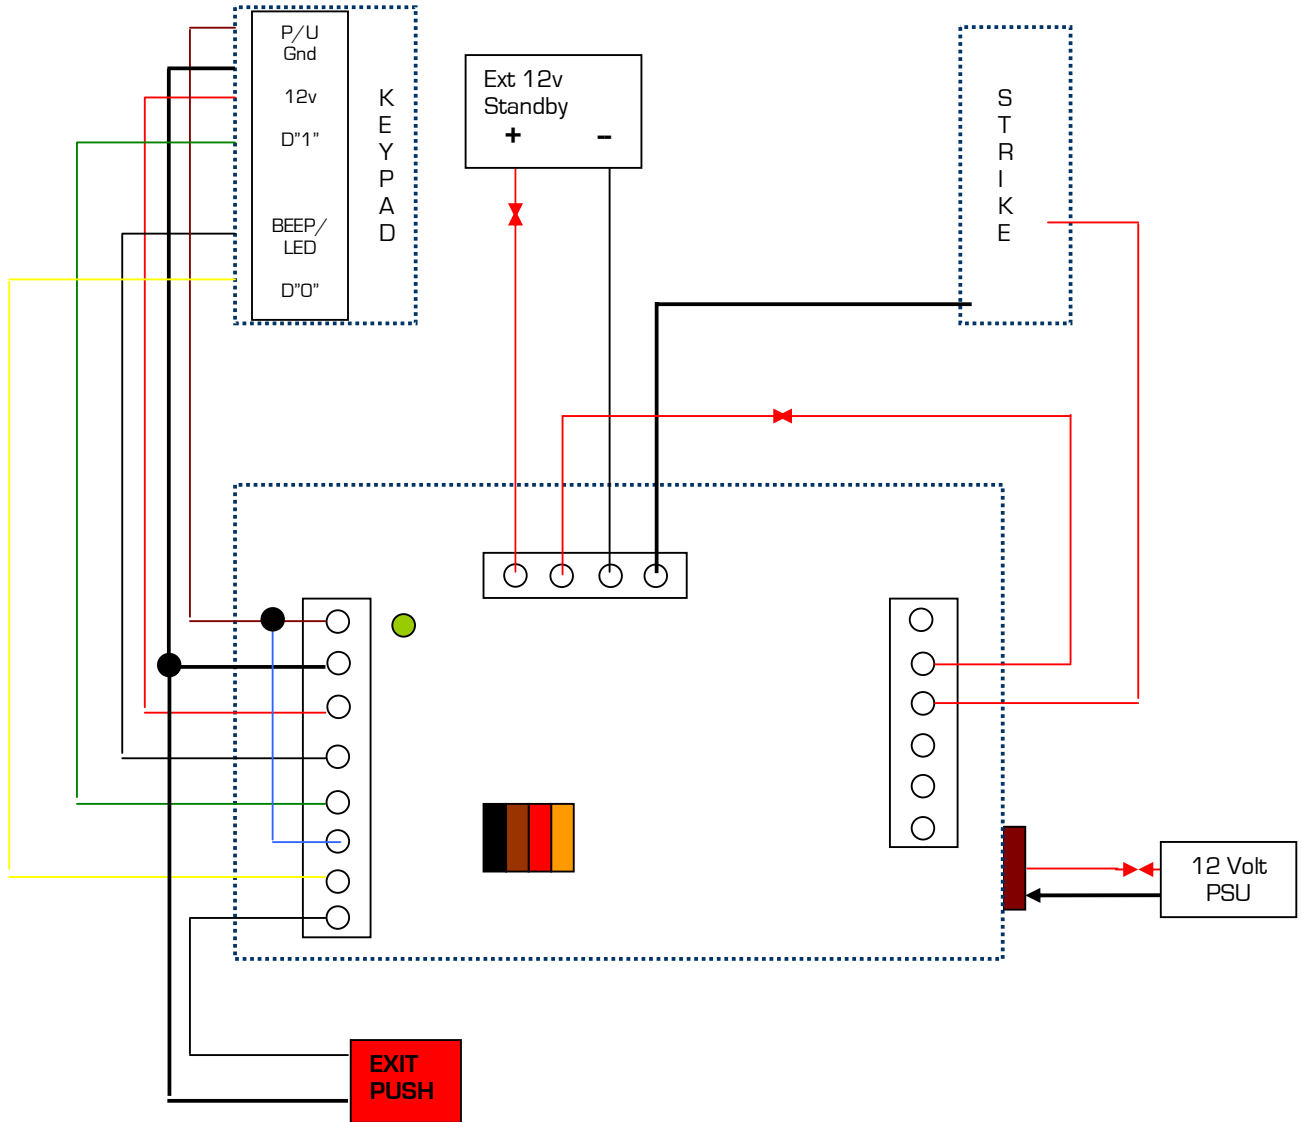

PL1

- Pin 1 To keypad pin 1
- Pin 2 To keypad pin 2 / To 0 volts / GND
- Pin 3 To keypad pin 3 / To 12 Volts
- Pin 4 LED / Beeper output pin 4, 8 or 6
- Pin 5 To keypad pin 5 DATA "1"
- Pin 6 "Pull Up" connect to pin 1
- Pin 7 To keypad pin 7 DATA "0"
- Pin 8 Exit request

PL3

- PIN 1 Ground
- PIN 2 Ground
- PIN 3 12 v in
- PIN 4 12v out

PL2

- Pin 1 Relay 1 N/O
- Pin 2 Relay 1 N/C
- Pin 3 Relay 1 Common
- Pin 4 Relay 2 N/O
- Pin 5 Relay 2 N/C
- Pin 6 Relay 2 Common

External 2 amp Fuse

Power supply & Controller must be located on secure side of the installation

E&OE